

Flipper Instructions  
A22v2.NA & EU  
(North America & EU)

Table of Contents

Introduction

Set up:

- Step 1. TV .....2
- Step 2. STB.....3
- Step 3. Favorite Channel .....3
- Step 4. Dual / Single Mode.....5  
TV Only ON/OFF
- Step 5. Lock the remote.....5

Other Set up Options

- Code Search.....7
- Learning.....7

- Troubleshooting.....7
- Code Retrieval.....7
- Resetting to Factory Settings.....7

Common codes:

TV:

- Apex 2521
- Dynex 0371
- Insignia 0371
- Magnavox 2321, 1151
- Polaroid 2421
- Panasonic 2711
- RCA 2777
- Philips 2321, 1151
- Pioneer 0131
- Samsung 0531
- Seiki 0131
- Sharp 2731
- Toshiba 1121, 0231, 2861
- Vizio 0001
- Westinghouse 0531

STB:

- Direct TV 0983
- Verizon 0684, 0724

Flipper Instructions  
A22v2.NA & EU  
(North America & EU)

## Introduction

Thank you for your purchase of Flipper. Flipper is a two device universal remote control – it works with all major TVs and Set Top Boxes (STB). Set Top Boxes are cable and satellite and digital adaptor boxes.

Flipper also works a TV only set up.

When set up, **On/Off** works both the TV and STB; **Volume** works the TV; and **Channel** works the STB. Flipper can be modified so that On/Off only works the TV.

For customer service, please email [Support@FlipperRemote.com](mailto:Support@FlipperRemote.com). We respond to all inquiries usually within 24 hours. (except holidays and weekends).

More information, including video tutorials, are available at [www.FlipperRemote.com/Support](http://www.FlipperRemote.com/Support)

### Batteries

Flipper uses two AAA batteries. Please use fresh batteries when starting to program. Flipper uses Flash Memory – settings will be saved when changing batteries.

## Set Up

If you receive your TV stations through an STB, please note how your TV is connected to the STB. This will allow you to reset the TV if you accidentally change your TV's channel during set up. Newer TVs are connected via an "Input," such as HDMI 1 or 2, or Video 1 or 2. Older TVs are usually set to a specific channel, such as 3 or 4.

Flipper has three set up methods: Direct Code Entry, Automatic Code Search, and Learning. We suggest Direct Code Entry. Please see Other Set Up Methods for Automatic Code Search and Learning.

### Step 1: TV

Flipper is preset to many TVs with code 0001. To test, press and release TV – the light will flash once. Test the volume and on/off. If Flipper works your device, go to STB. If not, continue:

1. Locate the 4-digit code for your TV in the TV code list.

Flipper Instructions  
A22v2.NA & EU  
(North America & EU)

2. Press and hold TV until the light turns turn solid.
3. Enter the first code for your device. If the code was entered correctly, the light turns off.
4. Test On/Off and Volume.
5. If Flipper works the TV, then go to Step 2 to set STB.
6. If Flipper does not work the TV, try the next code. It may take several codes to find one that works.

**Note:** If you are unable to find a working code, see Other Set Up Options.

**Note:** If the red light does not flash as it should, please see Troubleshooting.

## Step 2: STB

If using Flipper as TV only, skip STB set up.

Flipper is pre-set to most Motorola STBs. To test, press and release STB once, and check the Channel function. If your device works, go to the next Step. If not, continue:

1. Locate the 4-digit code for your STB in the STB code list. Codes are usually listed by device brand, not cable provider.
2. Press and hold STB until the light turns solid.
3. Enter the first code for your device. If the code was entered correctly, the light turns off.
4. Test the Channel. If Flipper works the STB, then continue to the next step.
5. If Flipper does not work the STB, try the next code. It may take several codes to find one that works.

**Note:** If you are unable to find a working code, see Other Set Up Options.

**Note:** If the red light does not flash as it should, please see Troubleshooting.

## Step 3: Favorite Channel Set Up

Flipper will either scroll through all available channels, or you can program in up to 25 Favorites. If you do not want to set up a Favorites list, go to Step 4.

In Favorite Channel Mode, **Channel Up/Down** scrolls through your Favorites; the 0-9 buttons work as normal.

**Note:** When advancing through favorites, let the channel change before pressing the button again.

Flipper Instructions  
A22v2.NA & EU  
(North America & EU)

### **Adding Channels**

Make a list of channels you want to save. Channels work in the order entered. For instance, if you enter 2, 5, 1, and 8, Favorites scroll through in that order.

### **Channel Format**

STBs use a three or four digit channel entry system. Enter channels as you normally would for your STB.

The instructions below assume you receive channels through an STB box (cable / satellite). If using Flipper as TV only, use the **TV** button instead of **STB**.

1. Press and hold **STB** and **ADD** at the same time until the light turns solid.
2. Enter the first channel followed by the **ADD** button, then enter the next channel followed by the **ADD** button, then enter the next channel, etc.

**Example:** 7-**ADD**; 4-4-**ADD**; 1-1-0- **ADD**; for channels 7, 44, 110.

#### **Options:**

“Enter” button: Some STBs may change channels faster by using an “Enter” button. In Flipper, the STB Enter function is stored in **Mute**. (Flipper does not have “enter” for TVs). The only way to know if this is working for your device is trial and error.

**Example:** 7-*Mute* (Enter)-**ADD**; 4-4-*Mute*-**ADD**; 4-0-2-*Mute*-**ADD**, for channels 7,44, 402.

0's as placeholders: If your STB does not use an Enter button, then 0's may be used as placeholders. For example: 0-7-**ADD**; 0-4-4-**ADD**; 1-1-0-**ADD**, 0418 for channels 7, 44, 110, 418.

3. Once Favorites are programmed, press and release the **STB** button to exit.
4. Test by scrolling through the list with the **Channel Up/Down**. You may need to scroll through twice for all Favorites to appear.
5. To add additional channels at any time, repeat these instructions.
6. Press and release **ADD** once to enter Dual Mode

**Note:** You may wish to try 5 channels at first, then test, to make sure the format is correct.

### **Deleting Channels:**

To delete channels from your Favorites, press and hold the **STB** (or **TV**) and **DEL** at the same time until the light turns solid, then enter the channel you want to delete, followed by **DEL**. For example: 4-4-**DEL** to delete channel 44.

Flipper Instructions  
A22v2.NA & EU  
(North America & EU)

**Switching Between Favorites and Regular:**

Press and hold **ADD** and **Dash** “-“ at the same time until the light flashes twice and turns off.

**Step 4: Dual Mode**

In Dual Mode, **On/Off** works both the TV and STB; **Channel Up/Down** and the **0-9** keypad works the STB; and **Volume** works the TV. For best operation, make sure that the TV and STB are in close proximity to one another.

1. To Enter “Dual Mode,” press and release **ADD**. The light will flash once.
2. To Exit Dual Mode, press either **STB** or **TV**, depending on which device you want to control.

**TV Only On/Off:**

You may wish to keep the STB on all the time to avoid the possibility that one device will turn on while the other device stays off.

Press and hold **ADD** until the light turns solid, then enter 999.

To return to Dual on/off, press and hold **ADD** until the light turns solid, and enter 998.

**Step 5: Lock the Remote Control**

Locking Flipper deactivates the set up buttons to avoid reprogramming by accident. If you do not want to lock, set-up is complete.

**Dual Mode:**

1. Lock: Press and hold **ADD** until the light turns solid, then enter 955. The light blinks out.
2. Unlock: Press and hold **ADD** until the light turns solid, then enter 956. The light blinks out.

**TV Only Mode:**

Use **TV** instead of **ADD**.

**Other Set-up Options**

There may be instances where your device is not in the code list, or you prefer to search for a code rather than enter it manually.

**Automatic Code Search**

Start with the TV and STB on. Code search sends codes from the database to your TV or STB to search for a match. When the device turns off, a match is found.

Flipper Instructions  
A22v2.NA & EU  
(North America & EU)

1. Press and hold **TV** until the light turns solid, if searching for a TV code. (Use **STB** if searching for a **STB** code.)
2. Press and release **On/Off**. The light will flash, sending 10-15 codes to the TV. The light turns solid when the batch is done.
3. If your TV turns off, then a working code is in that group. If the TV did not turn off, repeat the process. It may take 15-20 cycles to go through the database.
4. If the TV turns off, wait until the light stops flashing.
5. Then press and release the **Channel Down** button to send one code at a time until the TV turns back on. Go slowly to allow time for the TV to turn on before pressing again.
6. Once the TV turns back on, press and release **TV** (or **STB**). Test other functions.

**Note:** Some devices share partial code sets with other devices, so it is possible that not all functions work. If this happens, repeat the process until the correct code controls all your device's functions.

Flipper Instructions  
A22v2.NA & EU  
(North America & EU)

### Learning Set Up:

Flipper can “learn” (copy) the IR signals from your existing remote control. Each button is programmed separately. When learning TV signals, use the **TV** button; when learning STB functions, use the **STB** button.

It is helpful to do this procedure in low light, away from the TV or a light bulb. Light can interfere with the IR signal. Flipper’s Learning IR bulb is the right side bulb.

1. Place both Flipper and your device remote on a table with the tops facing one another.
2. On Flipper, press and hold **TV** and **On/OFF** at the same time until the light starts to flash. Release the buttons.
3. Press and release the key on Flipper that you want to copy, for example, Volume Up. The light will turn solid.
4. Press and hold same key from your existing device remote until the light on Flipper starts flashing. Once blinking, the learning process for that key is done.
5. Keep repeating step 1-4 until you learn all the keys you want.
6. Press **TV** to exit.
7. Check the buttons to see if they learned to correct signal. If not, repeat the process as needed until all buttons learn the desired function. It may take a few tries to learn all signals.

### Troubleshooting

Make sure Flipper is unlocked: press and hold **ADD** until the light turns solid, then enter 956. The light will blink out if locked. Also check TV and STB, as Flipper can be locked in any mode. Sometimes lock Flipper, then unlock.

### Code Retrieval

This feature lets you retrieve the code if using code search.

1. Press **TV** (or **STB**) and then 1, and release both. Count the flashes – this is the first digit. **Note:** If the light does not flash, the digit is zero.
2. Press **TV** and then 2, and release both. Count the flashes - this is the second digit;
3. Press **TV** and then 3, and release both. Count the flashes - this is the third digit.

### Reset to factory settings

Make sure Flipper is unlocked. Press and hold the **ADD** button until the light turns solid, then enter 954. The light will flash out.